



AMBI-RAD
Model Series T
Gas-Fired Unit Heaters

USER FORM WA/020/0501

USER INSTRUCTIONS

Hang This Near Your Heater

IMPORTANT: For safe and satisfactory operation, these instructions should be read and fully understood.

GENERAL:

For continued safe and efficient operation, this heater should be serviced regularly by a competent service engineer. A full after sales service is available from AMBI-RAD. Read the warranty and ensure that the heater is operated within the terms of the warranty. Maintain free access to the heater for servicing and do not restrict the air supply to the heater.

FOR YOUR SAFETY:

- **Ensure that the heater is properly earthed.**
- **If a gas leak is suspected, turn OFF the gas supply and contact the gas supplier immediately.**
- **DO NOT USE A NAKED FLAME to inspect for gas leaks.**
- **If the permanent pilot goes out for any reason, allow three (3) minutes before lighting.**

TO LIGHT THE PERMANENT PILOT:

- 1) Turn "ON" the electrical supply to the heater.
- 2) Set the room temperature controller to the lowest temperature setting. If a clock control or a summer/winter switch have been fitted, turn to "ON".
- 3) Turn "ON" the main gas supply.
- 4) Open the control panel of the heater; locate the pilot lighting hole.
- 5) Depress the control knob on the multifunctional control valve; hold the knob depressed while lighting the pilot.
- 6) After pilot is established, continue to depress knob for 20 seconds; release knob slowly.

TO TURN "ON" A HEATER WITH SPARK IGNITION:

- 1) Turn "ON" the gas supply and the electrical supply to the heater.
- 2) If a clock control or a summer/winter switch have been fitted, turn to "ON".
- 3) Set the room temperature control to above the ambient temperature.
- 4) An automatic sequence is started to ignite the main burners.
- 5) Adjust the room temperature control to the required operating temperature. The heater will operate automatically to maintain the required temperature setting.

"START-UP" NOTES:

- On initial start-up, several attempts may be required to remove the air from either the pilot gas supply line (permanent pilot) or the multifunctional control valve (spark ignition).
- When measuring gas pressure, do not remove screw. Loosen enough to allow gas pressure to register.
- If a heater with spark ignition will not "start" on initial start-up, the ignition controller may be in lockout position. Depress the reset button.

TO SHUT DOWN THE HEATER FOR A SHORT PERIOD:

Adjust the room temperature control to its lowest temperature or "OFF". The fan will continue to run for a short period to cool the heat exchanger. If the heater has a permanent pilot, the pilot will remain alight.

WARNING: The electrical isolator should only be used in an emergency and should not be used for closing down the main burner, as it switches off the fan prematurely and may damage the heat exchanger, invalidating the warranty.

TO SHUT DOWN THE HEATER FOR AN EXTENDED PERIOD:

- 1) Adjust the room temperature control to its lowest temperature or "OFF".
- 2) On a heater with a permanent pilot, rotate the control knob on the multifunctional control valve clockwise (approximately 1/12 of a full rotation).
- 3) After the fan has stopped, turn "OFF" the gas supply and the electrical supply.

NORMAL OPERATING SEQUENCE:

WITH PERMANENT PILOT (pilot lighted) -

- 1) Room thermostat senses need for heat.
- 2) Main gas valve in the multifunctional control valve is energised.
- 3) Main burners are ignited by permanent pilot light.
- 4) In approximately 45 seconds, the fan control switch senses heat exchanger temperature and turns on the fan.
- 5) Room temperature control senses sufficient heat.
- 6) Main gas valve is de-energised, and main burners are extinguished.
- 7) After approximately 120 seconds, the fan control switch turns off the fan.

WITH SPARK IGNITION -

- 1) Room temperature control senses need for heat.
- 2) Pilot ignites and is proven. Main burners are ignited.
- 3) In approximately 45 seconds, the fan control turns on the fan.
- 4) Room temperature control senses sufficient heat.
- 5) Main gas valve is de-energised and main burners are extinguished.
- 6) After approximately 120 seconds, the fan control switch turns off the fan.

SPARK IGNITION OPERATION NOTE: If a momentary interruption of the electrical power or gas supply occurs during operation causing the burner to extinguish, the safety switch will open the main valve and re-initiate the complete operating sequence. If the pilot flame is not established within 50 seconds, the ignition controller locks out and must be manually reset. Push the reset button in the electrical box (or button may be remotely mounted).

NOTE: If the first reset is not successful, wait 15 seconds before resetting the ignitor.

MAINTENANCE AND SERVICE:

To ensure safe and efficient operation, this heater should be serviced at least annually. It is strongly recommended that the installing heating engineer or AMBI-RAD Service Division be contacted to provide the necessary service. Retain on file a copy of the service instructions for this heater.

MAINTAIN THESE CLEARANCES

Required Clearances for all Models and Sizes of T Series Heaters	Top	Sides of the Heater		Bottom of the Heater		Rear (Measuring from cabinet)
		Control Side	Side Opposite Control Side	To Combustibles	To Non-Combustibles	
	152 mm	Service Clearance Required - See Note	152 mm	152 mm	0 mm	750 mm

NOTE: Service Clearance for Control Side is the width of the unit plus 152 mm.
(This service clearance is required in order to remove the drawer-type burner rack.)

Sales & Service by: **AMBI-RAD® Energy Efficient Heating Systems**

**Ambi-Rad Limited,
Fens Pool Avenue,
Wallows Industrial Estate,
Brierley Hill,
West Midlands DY5 1QA
Telephone: 01384 489 700
Fax: 01384 489 707**