

## AIRBLOC AB RANGE

GAS FIRED AIR CURTAIN

### INSTALLATION AND OPERATING MANUAL



#### INDEX

#### Section

General Information -----	1
Dimensions -----	2
Technical Specifications -----	3
Installation Details -----	4
Wiring Details -----	5
Servicing -----	6
Parts Replacement -----	7
Spare Parts -----	8
Fault Finding -----	9
User Instructions -----	10

#### WARNINGS

Nortek Global HVAC (UK) Ltd equipment must be installed and maintained in accordance with the relevant provisions of the Gas Safety (Installations and Use) Regulations 1998 for gas fired products. Due account should also be taken of any obligations arising from the Health and Safety at Works Act 1974 or relevant codes of practice. In addition the installation must be carried out in accordance with the current IEE wiring regulations (BS 7671), BS 6896 (Industrial & Commercial) and any other relevant British Standards and Codes of Practice by a qualified installer. All external wiring MUST comply with the current IEE wiring regulations.

Part No. 702110



# 1. General Information.

Welcome to the new AB Airbloc gas fired air curtain models. Local regulations may vary in the country of use and it is the installers responsibility to ensure that such regulations are satisfied.

All installation, assembly, commissioning and service procedures must be carried out by suitably qualified competent persons to the statutory regulations in the country of use.

These instructions refer to products for use in GB and the IE.

These air curtains are suitable for indoor use only, and designed to operate at an ambient temperature between  $-15^{\circ}\text{C}$  and  $30^{\circ}\text{C}$ .

When installing, commissioning and servicing is undertaken on the gas fired air curtains specified in these instructions, due care and attention is required to ensure that working at height regulations are adhered to at the mounting heights specified.

All dimensions shown are in mm unless otherwise stated.

The manufacturer reserves the right to alter specifications without prior notice.

**PLEASE READ** this document prior to installation to familiarise yourself with the components and tools you require at the various stages.

The primary reason for installing gas fired air curtains is to prevent the influx of cold outside air through a door opening into a heated area.

Typical applications include large despatch bay doors in factories and warehouses, and internal doors between areas of different temperatures.

Wider door openings can be accommodated by bolting two or more units together.


Air curtains control the internal climate by emitting an air stream with enough velocity to meet the floor so creating an air barrier in the door area. To prevent the ingress of outside draughts, the discharge louvre is angled outwards, so that the air leaving the building meets the wind trying to enter, thus deflecting it. (See diagrams below).

Airbloc gas fired air curtains provide uniform air distribution across the full width of the door, keeping heated or conditioned air inside the building and stopping the ingress of cold air, draughts, and dust.


This manual provides detailed information on the installation of Airbloc gas fired air curtains. It is essential that these products are installed in accordance with these manufacturers instructions.



Without air curtain

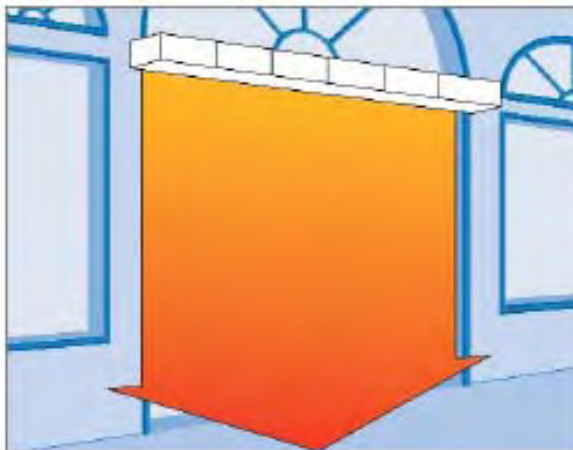

With air curtain

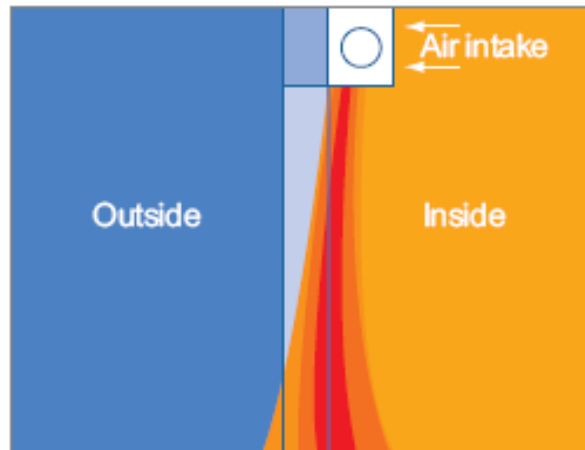


Pattern of airflow

## 2. Dimensions.

Diagram 1: Dimensions

Model	A mm	B mm	C mm	D mm	E mm	F mm	G mm	Weight (kg)
AB 175	1750	950	457	700	820	125	1710	185
AB 225	2250	950	457	700	820	125	2210	230

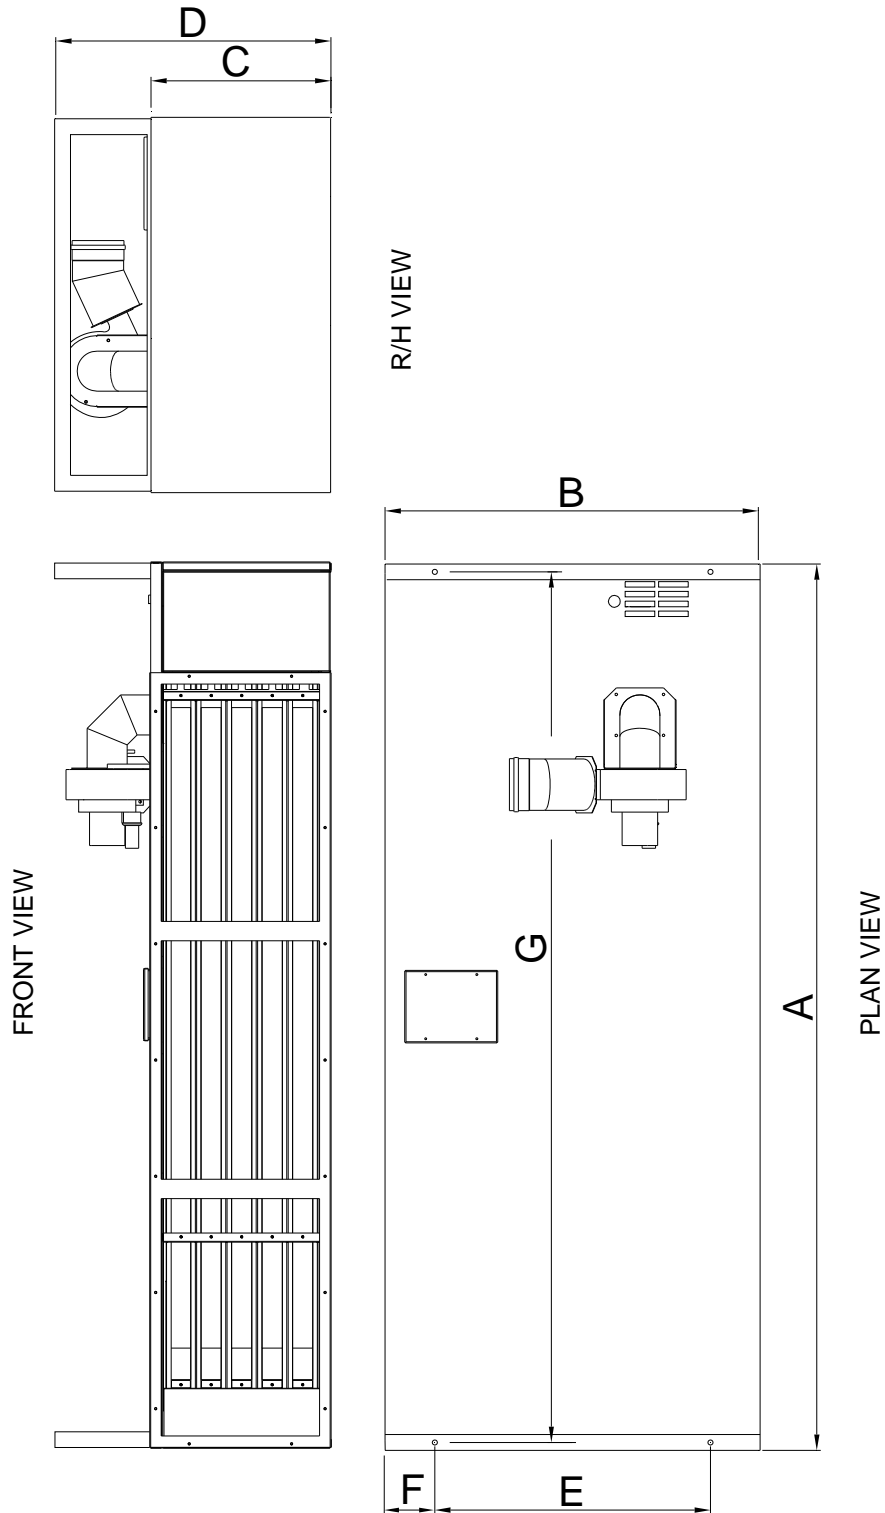

### 3. Technical Specifications.

	Air curtain model ABxxxx					
	AB 225N	AB 175N	AB 225N	AB 175N	AB 225P	AB 175P
Gas type	Natural gas G20 (I <sub>2H</sub> )		Natural gas G25 (I <sub>2L</sub> )		Propane G31 (I <sub>3P</sub> )	
Gas connection	½ " BSP external thread					
Max supply pressure (mbar)	25		30		45	
Min supply pressure (mbar)	17		20		25	
Nominal pressure (mbar)	20		25		37	
Gross heat input (kW)	66	49	66	49	65	49
Nett heat input (kW)	59.4	44.1	59.4	44.1	60.2	45.4
Gross heat output (kW)	60.1	44.6	60.1	44.6	59.2	44.6
Nett heat output (kW)	54.0	40.1	54.0	40.1	54.8	41.3
Gas flow rate (m <sup>3</sup> /hr)	6.3	4.7	7.4	5.4	-	-
Gas flow rate (l/hr)	-	-	-	-	9.4	7.0
No. of injectors	5					
Injector size (mm)	Ø3.3	Ø2.9	Ø3.3	Ø2.9	Ø1.85	Ø1.65
Injector pressure (mbar)	7.5	7.0	10	10	25	25
Flue nominal bore (mm)	130					

#### I/D fan

Voltage	230V 1 Ph 50 Hz
Power rating	100W
Current	0.5A (FLC)

#### Air distribution fans

Type	Centrifugal (with integral thermal trip)					
Speeds	2					
No. of fans	4	3	4	3	4	3
Maximum air volume	9600m <sup>3</sup> /hr (AB 175)				12800m <sup>3</sup> /hr (AB 225)	
Voltage	230V 1PH 50Hz					
Power rating (per fan)	1140 W					
Current (per fan)	5.2A (FLC)					
Start current (per fan)	12A					

#### Constitution

Model	AB175	AB225
AB350=	X 2	
AB400=	X 1	X 1
AB450=		X 2
AB525=	X 3	
AB575=	X 2	X 1
AB625=	X 1	X 2
AB675=		X 3



#### WARNING:

THIS AIR CURTAIN SHOULD NOT BE INSTALLED WHERE THERE IS A CORROSIVE ATMOSPHERE.

## 4. Installation Details.

### Health and Safety

Airbloc air curtains must be installed in accordance with the relevant provisions of the Gas Safety (Installations and Use) Regulations 1998. Due account should also be taken of any obligations arising from the Health and Safety at Work Act 1974 or relevant codes of practice. In addition the installation must be carried out in accordance with the current IEE wiring regulations (BS 7671), BS 6896 (Industrial & Commercial) and any other relevant British Standards and Codes of Practice by a qualified installer. Isolate all electrical supplies to the heater & control panel before proceeding.


For your own safety we recommend the use of personal protective equipment when handling this air curtain.

Before installation, check that the local distribution conditions, nature of gas and pressure, and the current state of adjustment of the appliance are compatible.

Airbloc gas fired air curtains are supplied with mounting brackets pre-fitted, either as single units, or in multiples, which can be bolted together to suit various door widths. The minimum mounting height is 1.8 metres (see diagram 2 below).

### 4.1 Mounting.

#### Diagram 2.

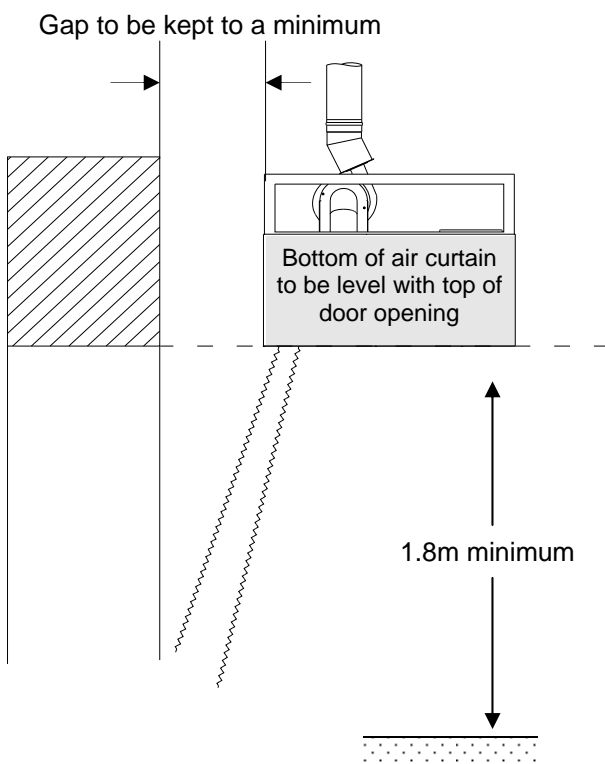

### 4.1.1

Each single air curtain should be supported by cantilever brackets (not supplied) then fixed back to the building structure by bolting directly using suitable support brackets, or by suspending from above using suitable steelwork. (See diagram 3, page 6).

### 4.1.2



Multiple air curtains should be bolted together using 3 off M10 set pins, nuts and washers fitted through the holes provided in the mounting brackets, then suitable support channels (not supplied) must be fixed on top of the factory fitted brackets along the full length of the assembled air curtains to spread the load.

The assembly can now be fixed back to the building structure by bolting directly using suitable support brackets, or suspending from above using steelwork. (See diagram 4 page 6). If required, the support channel may be extended slightly past the ends of the air curtains to aid fixing.

**Note:** Where multiple air curtains are fitted above up and over doors or where central support is inappropriate, the support channel should be replaced with channels of a greater cross section to prevent the assembly from bending.


It may be necessary to adjust the position of the air outlet louvres to provide the correct airflow across the door opening. This can be done by first loosening the four locking pins located two at each end of the louvres (arrowed, Fig. A), then loosening the intermediate locking Allen pins (arrowed, Fig. B). The louvres can now be moved to the desired position and the locking pins re-tightened.

**NOTE:** The AB 225 model has two pairs of intermediate locking Allen pins, whereas the AB 175 model only has one pair.

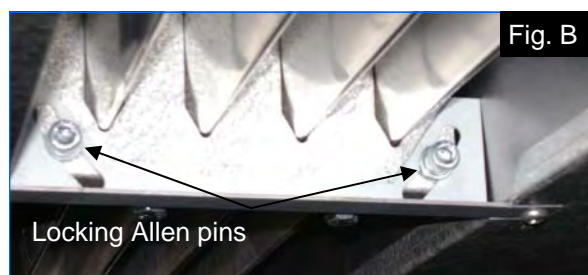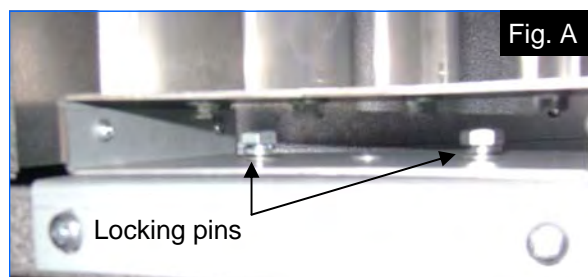


## 4. Installation Details cont.

**Diagram 3:** Mounting method (single air curtain)

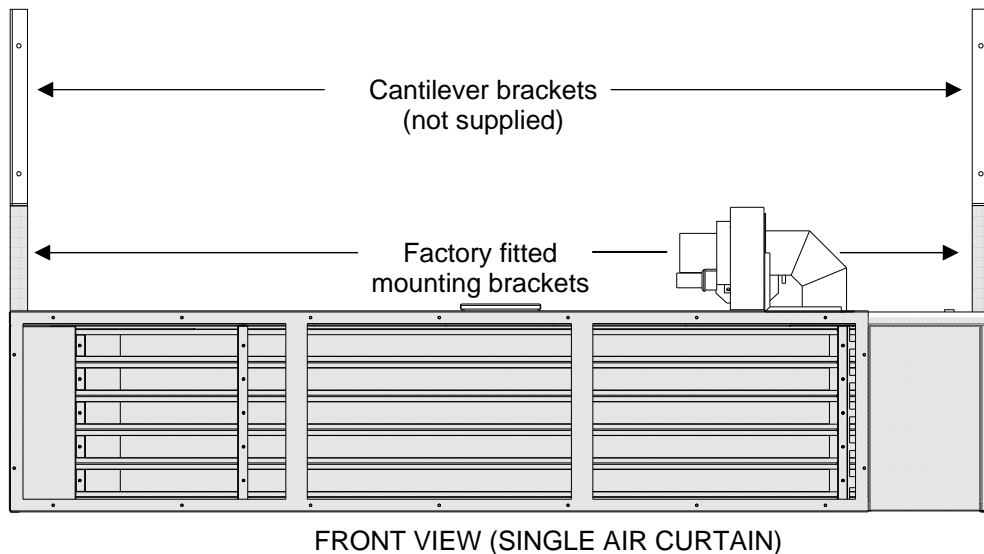

**Diagram 4:** Support channel (multiple air curtains)

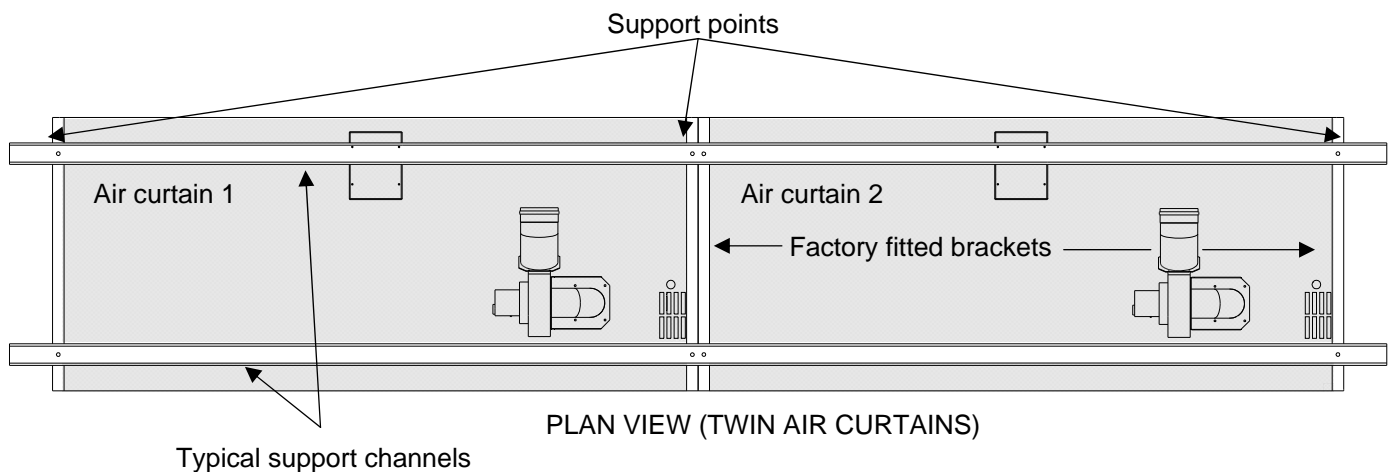

### 4.2 Flueing.

The gas fired air curtain must be installed with a fixed flue. The fan is fitted with a 130mm diameter female outlet. (Flue and fittings can be supplied by the manufacturer).

The flue pipe should be adequately supported at regular intervals from the building structure and terminated externally with a British Gas tested and certified GC1 terminal.

The maximum flue length is 7m and the maximum number of bends is two on individually flued appliances. The flue may be installed vertically or horizontally, (See diagrams 5, 6 and 7 on pages 8 and 9).

### 4.3 Ventilation requirements.

In buildings having an air change rate of less than 0.5 per hour, additional mechanical or natural ventilation is required. For detailed information please see BS6230 section 5.2.2.2.1.1.

#### 4.3.1 Mechanical ventilation.

Should be installed to meet a minimum of 0.5 air changes per hour using appropriately sized fans interlocked with the heaters.

#### 4.3.2 Natural ventilation.

Low level ventilation openings with a free area of at least  $2\text{cm}^2/\text{kW}$  shall be provided. See section 5.2.2.2.1.2.



## 4. Installation Details cont.

### Flue technical details.

Model	AB 225		AB 175	
	Natural gas (G20)	Propane (G31)	Natural gas (G20)	Propane (G31)
Gas type	Natural gas (G20)	Propane (G31)	Natural gas (G20)	Propane (G31)
Mass flow rate of Flue gases (kg/s)	0.0340	0.0332	0.0242	0.0283
Flue gas temperature @ flue outlet (°C)	162	173	172.5	182
Flue pressure (Pa) positive	55		49	

### Method for calculating equivalent flue resistance.

Component	Internal size (mm)	Resistance factor (Ke)	
Pipe	130	0.25	per metre
90° bend	130	0.5	per fitting
135° bend	130	0.25	per fitting
Terminal	130 GC1	0.25	per fitting

Inlet resistance of flue (Ki)		Outlet resistance of flue (Ko)	
130 mm spigot	1.0	130 mm flue	1.0

The formula for calculating the equivalent flue size is as follows:

$$H_e = H_a \times \frac{(K_i + K_o)_e}{(K_i + K_o)_a - K_e H_a + \Sigma K}$$

Where:

$H_e$  is the height of the equivalent flue.

$H_a$  is the vertical height of the actual or proposed flue measured from the flue spigot.

$K_i$  is the inlet resistance of the flue.

$K_o$  is the outlet resistance of the flue.

Subscript 'e' refers to the equivalent flue diameter. Subscript 'a' refers to the actual or proposed flue diameter.

$K_e$  is the resistance per unit length of the equivalent flue.

$\Sigma K$  is the resistance (other than the inlet and outlet resistances) of the actual or proposed flue.

Note:  $K_i$  and  $K_o$  are obtained from the table above.

### Example (125mm diameter):

Inlet resistance of actual flue	1
Outlet resistance of actual flue	1
Inlet resistance of equivalent flue	1
Outlet resistance of equivalent flue	1
The vertical height of the actual or proposed flue measured from the flue spigot	7

### Other resistances of actual flue:

Terminal (1)	0.25
90° bend (0)	0
135° bend (0)	0
Flue pipe	1.75

$H_e =$	6.22
---------	------




### WARNING:


THIS AIR CURTAIN SHOULD **NO** BE INSTALLED WHERE THERE IS A CORROSIVE ATMOSPHERE.


## 4. Installation Details cont.

**Diagram 5:** Typical vertical flue arrangement

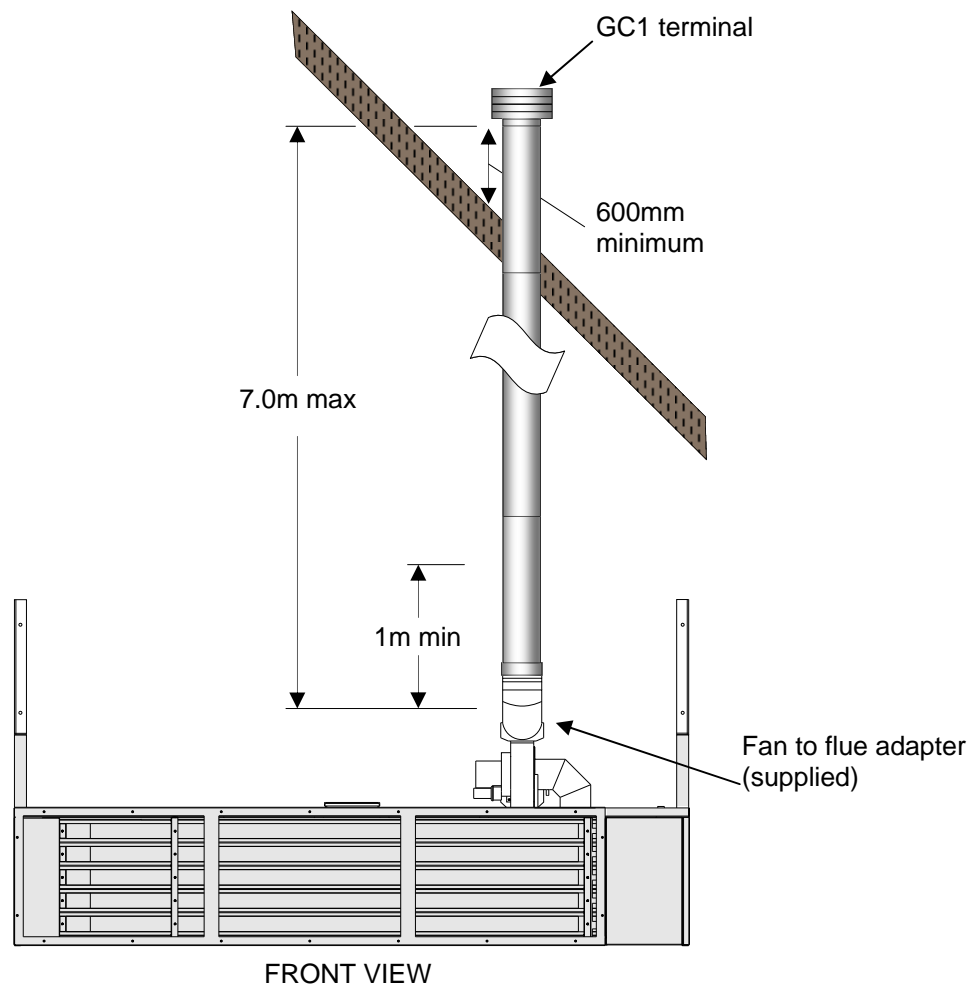

**Diagram 6:** Typical horizontal flue arrangement (Method 1, rear exit)

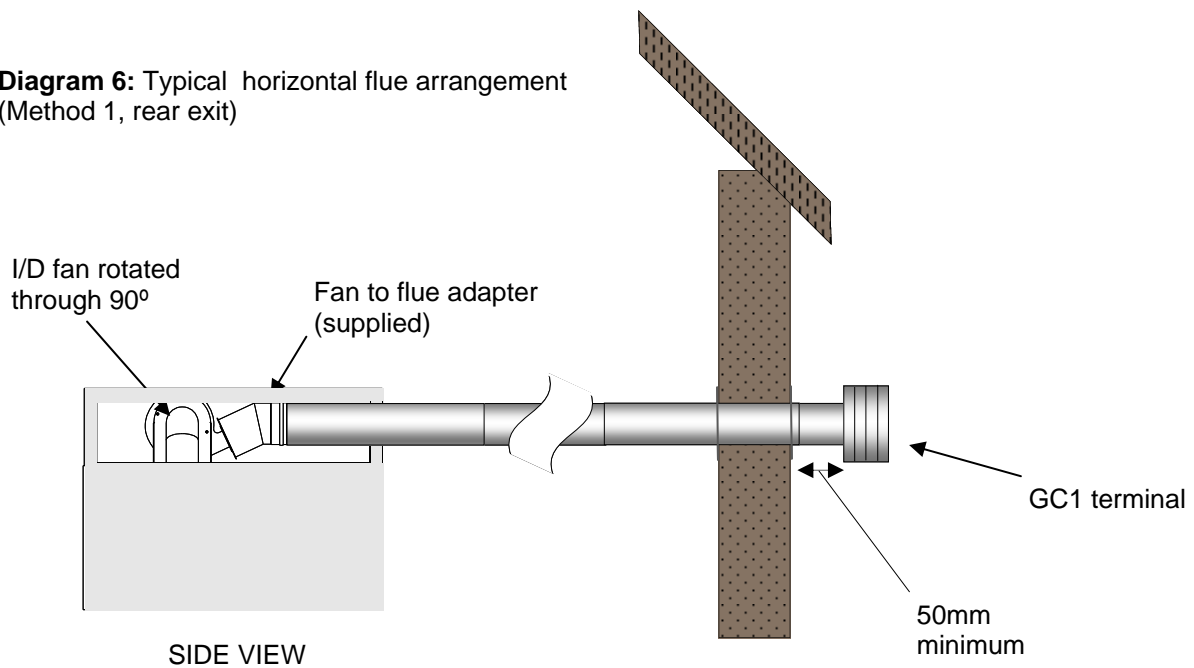


 Ventilation requirements are detailed in section 4.3.



## 4. Installation Details cont.

**Diagram 7:** Typical horizontal flue arrangement  
(Method 2, left or right hand exit)

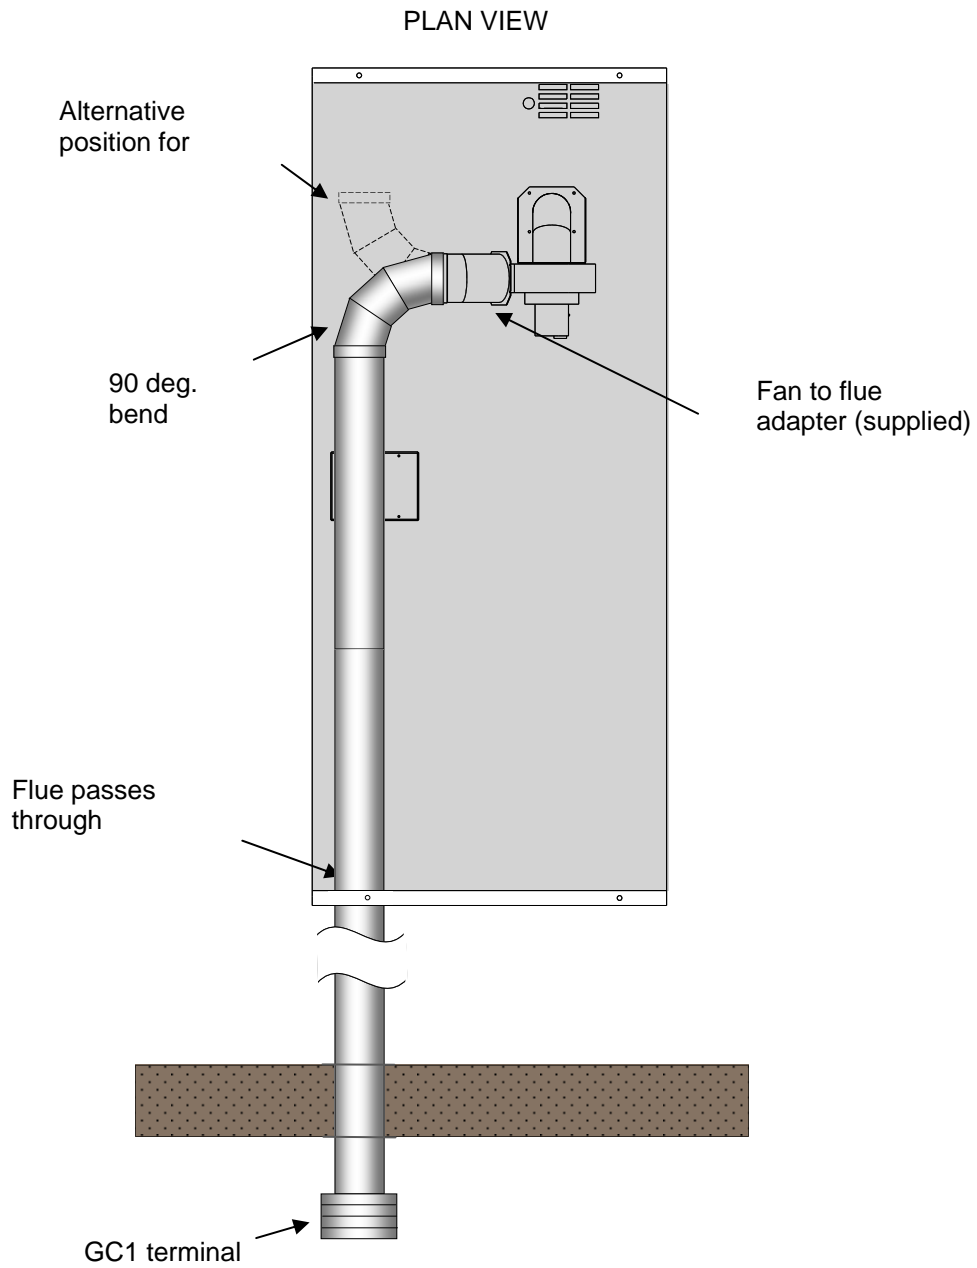

## 4. Installation Details cont.

Before fitting a horizontal flue, it will be necessary to rotate the I/D fan through 90° on its mounting bracket to enable the flue to be routed to the rear of the air curtain as shown in diagram 6.


Removal and refitting of the I/D fan is described in section 8 of this manual, parts replacement (Fig.18).

**Note:1:** The maximum permissible horizontal flue length should be calculated using the formula for equivalent flue sizes shown on the previous page.

**2:** When the horizontal flue is to pass through a wall constructed of combustible material, a suitable approved fireproof sleeve should be fitted prior to installing the flue pipe.

## 5. Wiring Details.

**Diagram 7: Burner control wiring**

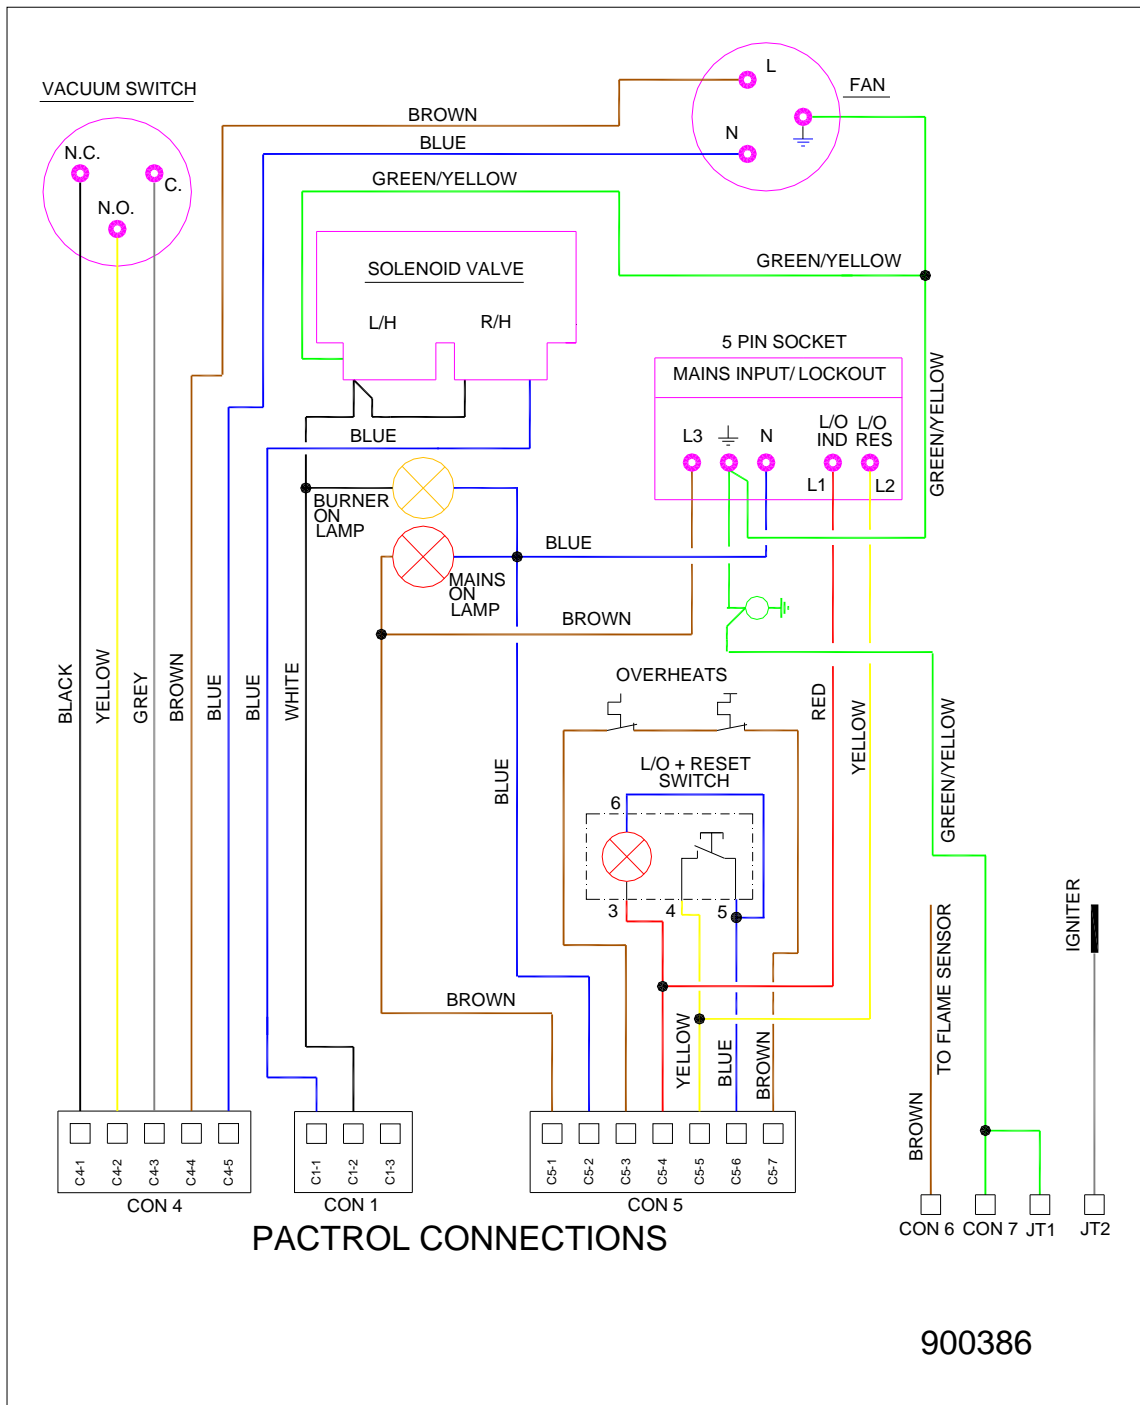

## 5. Wiring Details cont.

! *A customer specific control panel wiring diagram will be supplied with each air curtain*

### 5.1 Burner controls

The burner controls are mounted in the burner control cubicle which is an integral part of the air curtain casing and are accessible by opening a hinged lid on the right hand side of the air curtain (see Figs. 4 and 5 in section 8 of this manual for details). The controls accessible in the cubicle are: gas solenoid valve, ignition controller, air pressure switch, flame probe, ignition electrode, reset switch, red and amber neon lamps, plus associated wiring harness. For details see burner wiring diagram in section 5, page 9.

### 5.2 Control panel.

The electrical control panel incorporates the facility to interlock with the door opening mechanism and automatically switch the air curtain between high/low speed as the door is opened and closed. A pair of volt free auxiliary contacts are required on the door open/close contactor which closes as the door opens. If this is not available then a suitably positioned limit switch and striker plate will need to be fitted to the door.

The panel incorporates an auto/off/manual selector switch, which, when in 'auto' mode operates the air curtain in low speed via an external room thermostat provided the door is the down position. In the door up position the air curtain operates in high speed and overrides the room thermostat. The 'manual' position overrides the door interlock and thermostat, and the 'off' position turns the air curtain off.

A cool/heat selector switch is also incorporated which allows the air curtain to supply heated air, or unheated ambient air.

The panel also contains a removable link on the main terminal rail to allow the air curtain to be switched on and off remotely via a BMS control relay.

The panel may also be fitted with optional low voltage (24V AC) relays for fire alarm/door contact interlocks.

Regardless of the position of any of the above switches, the main air fans must be running to allow the burner to run.

### 5.3 Overheat protection.

In the event of any overheat condition there are two thermal limit controls fitted inside the air curtain. The controls are factory set and non-adjustable. The self resetting (cycling) control activates at 70°C, and the manual reset control at 96°C. If either set point is reached, the corresponding limit control will interrupt the electrical power to the burner gas valve. The burner will not relight until the limit control has reset. The manual reset button is located on top of the heater on the left hand side of the thermostat cover and can be accessed after first removing the dust cover. (See Figs. C and D).

These safety devices provide protection in the event of an air distribution fan motor failure, or lack of airflow due to restrictions. (For location see section 8 Fig.29, and section 5 diagram 8, burner controls wiring diagram).

! *Warning: never attempt to bypass the thermal limit controls as hazardous conditions could result.*



Fig. C



Fig. D


## 6. Servicing.

! These appliances should be serviced annually by a competent person to ensure safe and efficient operation. In exceptionally dusty or polluted conditions more frequent servicing may be required. The manufacturer offers a maintenance service. Details available on request. **Isolate gas and electricity supplies before commencing any work.**

### 6.1 Tools Required.

The following tools and equipment are advisable to complete the tasks laid out in this manual.

! Suitable alternative tools may be used.

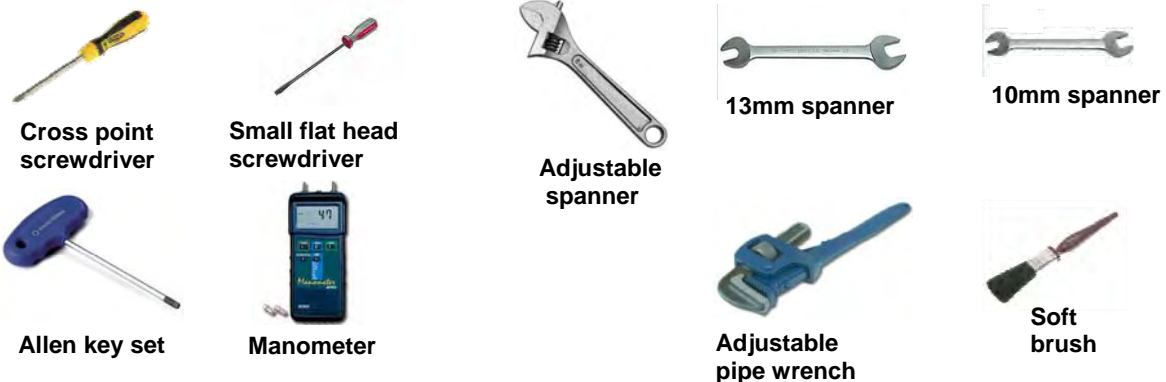

Cross point screwdriver

Small flat head screwdriver

Adjustable spanner

13mm spanner

10mm spanner

Allen key set

Manometer

Adjustable pipe wrench

Soft brush

### 6.2 Burner assembly.

The major components of the burner assembly can be accessed by removing the two lid retaining screws located on the right hand side on top of the air curtain, and swinging the lid downwards as shown in Figs 4 & 5 in section 8 of this manual. Section 8 also details the removal of the major components.

#### 6.2.1 Manifold/injectors.

Remove the manifold complete with injectors as described in section 8. The manifold/injectors should be examined for signs of debris and cleaned if necessary by blowing compressed air in the reverse direction to flow. Individual injectors can be replaced if necessary.

#### 6.2.2 Burners.

Access to the burners is achieved by first removing the mounting plate carrying the ignition sequence controller and pressure switch, (see section 8). The access plate can now be removed after unscrewing the four fixing screws. The burners can now be examined and cleaned using a soft brush, or by blowing compressed air in the reverse direction to flow. Individual burners can be replaced if necessary by removing the two retaining screws.

#### 6.2.3 Spark electrode .

Remove the spark electrode as described in section 8 and examine. If it is in good order check the electrode gap, this should be  $3.5\text{mm} \pm 0.5\text{mm}$ . Adjust the gap if necessary by carefully bending the earth rod, then re-checking the measurement.

#### 6.2.4 Flame probe.

Remove the flame probe as described in section 8 and examine for signs of erosion. The probe should be cleaned if necessary using a fine grade emery paper.

### 6.3 I/D fan.

! **NOTE: Before removing the I/D fan it will be necessary to remove the first flue section after releasing it from the fan/flue adapter. (See section 8 Fig.20 for details).**

Disconnect and remove I/D fan as described in section 8. Clean off any dust or deposits using a soft brush paying particular attention to the impeller. Also remove any dust or deposits from the finger guard covering the secondary (cooling) impeller, and the mesh aperture in the motor cover. Check that the impeller is free to rotate and that there is no play in the bearings.

### 6.4 Emitter tubes.


#### 6.4.1 External.

Brush away any dust on the exterior of the emitter tubes after first removing the ten screws retaining the mesh air inlet grille as shown in Fig.0. overleaf

#### 6.4.2 Internal.

To gain access first remove the five retaining screws from the inspection cover as shown in Fig.1 overleaf.

## 6. Servicing cont.

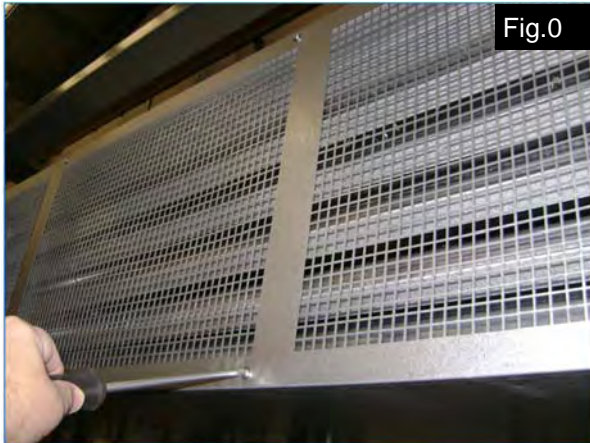

Clean out the emitter tubes using a suitable flue brush/scraper fitted with flexible extension rods.



Remove the six flue box lid retaining nuts from their captive studs as shown in Fig.2. then remove lid taking care not to damage the gasket.



Remove turbulators (5 off) as shown in Fig.3, and clean off any dust or deposits with a soft brush.

! **NOTE:** The turbulators are fitted in the emitter tube non-firing legs only. (See Fig.4)

! **NOTE:** To clean the firing legs of the emitter tubes it is necessary to remove the burners as described in section 6.2.2.

### 6.5 Air outlet louvres.

The air outlet louvres should be cleaned with a soft brush. Check that the louvres are set to the required angle.

### 6.6 Air distribution fans.

The air distribution fans can be accessed by opening the fan lid as described in section 8. Clean off any dust or deposits with a soft brush paying particular attention to the impeller. Check that the impeller spins freely, and that there is no play in the fan bearings.

The fan(s) can be removed, if necessary, as described in section 8.

! **NOTE:** Following any servicing work it will be necessary to re-commission the air curtain (See section 7).



## 7. Commissioning.

**! This appliance must be commissioned by a suitably qualified engineer**

### 7.1 Gas connection

Only persons suitably qualified to work on gas fired appliances may carry out commissioning and testing. The whole of the gas service installation including the meter must be inspected, tested for gas soundness, and purged in accordance with the current rules in force.

**! WARNING: Never use a naked flame for checking gas soundness.**

### 7.2 Air curtain gas pipework

The gas soundness of the air heater pipework has been checked prior to leaving the factory. However during installation, connections may have been loosened. Check the gas soundness of the appliance pipework using suitable leak detection fluid. If any leaks are found they must be rectified immediately.

### 7.3 Check vacuum setting

**7.3.1** Ensure that the gas and electrical supply to the control panel is switched on. Ensure that the control panel heat/cool selector switch is set to the 'cool' position. The air curtain fans will now start.

**7.3.2** Remove the cap from the tee piece test point (see Fig.4A) and connect a manometer.



**7.3.3** Adjust flue damper (see Fig.4B) to achieve the **cold** vacuum setting as shown in the table.

**7.3.4** Ensure that the control panel heat/cool selector switch is now set to the 'heat' position. The air curtain fans will now start and the burner will fire automatically. Allow the air curtain to heat up for 15 minutes.

**7.3.5** Adjust flue damper (see Fig.4B) to achieve the **hot** vacuum setting as shown in the table.



damper handle

Vacuum setting (mbar)	AB225	AB175
COLD	4.7	4.7
HOT	2.8	2.8

**! NOTE: If the air curtain will not start on initial start up, the ignition controller may be in lockout position and require resetting. This may occur especially if the appliance has been on stand-by for a prolonged period.**

### 7.4 Air curtain lighting sequence

AB air curtains are fitted with automatic spark ignition. When adequate airflow for combustion is proven by an air proving switch, and a pre-purge period has elapsed, the integral igniter and gas control valve operate. The ignition spark ignites the burner and the flame is detected by a flame ionisation rod sensor. If a burner flame is not detected, then the ignition controller proceeds to lockout and will require manually resetting. Lockout is indicated by the illuminated burner rocker switch on the burner housing, and by a lockout lamp on the control panel, and can be reset either by pressing the illuminated burner rocker switch or the control panel lockout reset button.

**! NOTE: If the first lockout reset is not successful, further investigation will be required to ascertain the fault.**

### 7.5 Burner gas pressure adjustment

The gas pressure is set for the required heat input before the appliance leaves the factory, normally, provided the gas supply to the air curtain is in accordance with the supply pressure described on the appliance data plate, the operating pressure will not require adjustment. To check the pressure, the following procedure should be carried out:

## 7. Commissioning cont.

### 7.5.1


Ascertain from section 3 (technical specifications) of this document, and the appliance data plate, the correct operating gas pressure for the air curtain burner.

### 7.5.2

Turn the control panel cool/heat selector switch to the 'cool' position.

### 7.5.3

Remove the screw from the burner pressure test point of the gas control valve (see Fig. 5).

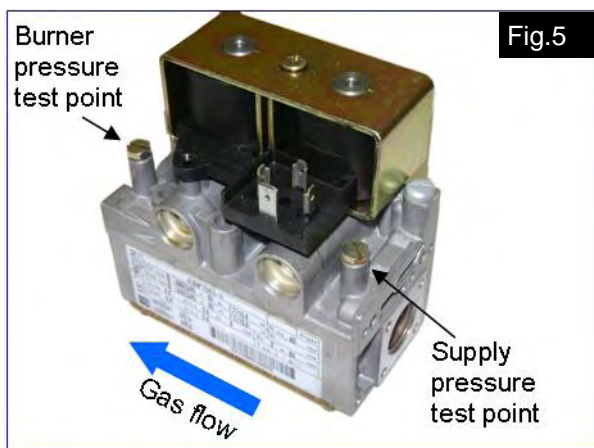

First remove the plastic dust cover from the regulator adjusting screw. Turn the regulator adjusting screw anticlockwise to decrease gas pressure, or clockwise to increase gas pressure. (See Fig. 6) After adjustment replace dust cover.

### 7.5.7

Set control panel heat/cool switch to the 'cool' position to turn the burner OFF. Replace the test point screw (if removed). Relight the burner and test for gas soundness using suitable leak detection fluid.

### 7.5.4

Connect a suitable manometer to the burner pressure test point.


Turn the control panel cool/heat selector switch to the 'heat' position, then wait for burner to light.

### 7.5.5

Observe the burner gas pressure reading on the manometer and compare to the required pressure.

### 7.5.6

If necessary adjust as follows:

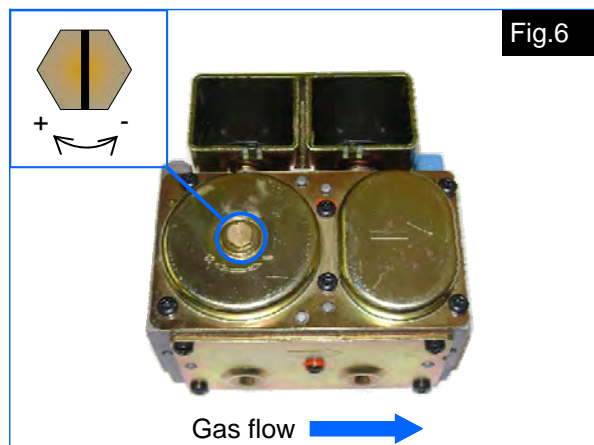



## 8. Parts Replacement.

**!** All servicing/maintenance work on this air curtain should be carried out by suitably qualified and Corgi registered engineer. Before commencing any work please ensure that the gas and electricity supplies are turned off. Always test for gas soundness with a suitable leak detection fluid.

### 8.0 Tools required.



Allen key set



Adjustable pipe wrench



Adjustable spanner



Cross point screwdriver




10mm spanner



13mm spanner


### 8.1 Burner/control assembly.

The major components of the burner/control assembly can be accessed by removing the two lid retaining screws located on the right hand side on top of the air curtain, and swinging the lid downwards as shown in Figs 7 & 8.

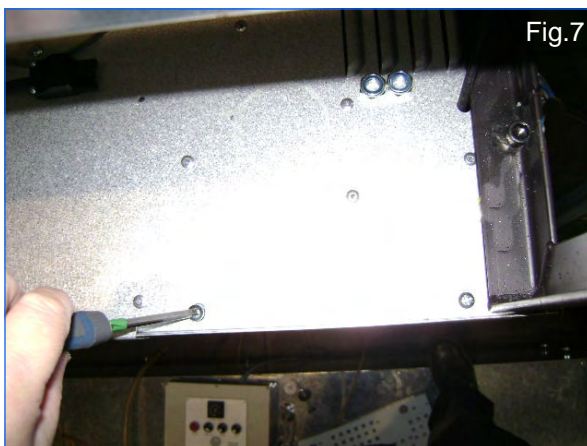


### 8.1.1 Gas valve.

Remove electrical connectors as shown in Fig.9

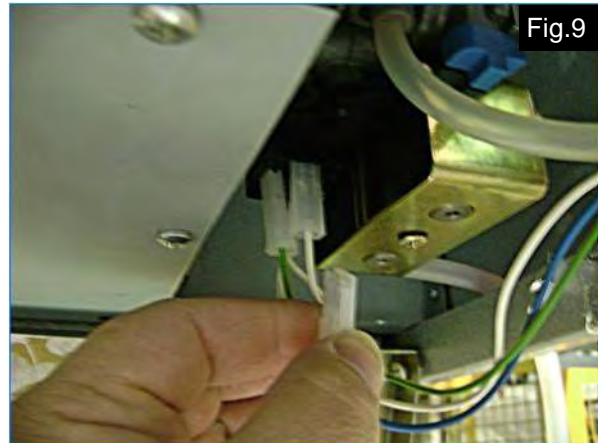


Disconnect the mains gas pipe feeding the air curtain complete with gas cock. Remove the two strain relief plate screws (arrowed, Fig.10). The pipe can only be removed downwards complete with the gas valve, (see description and Figs. 11 and 12 overleaf).

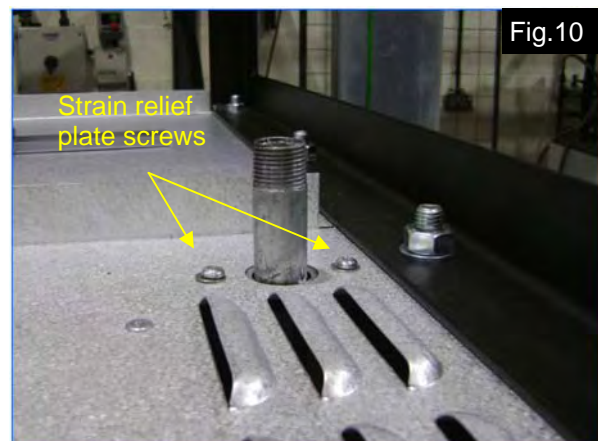


## 8. Parts Replacement cont.

Using a suitable pair of spanners release the union on the outlet side of the gas valve as shown in Fig. 11.

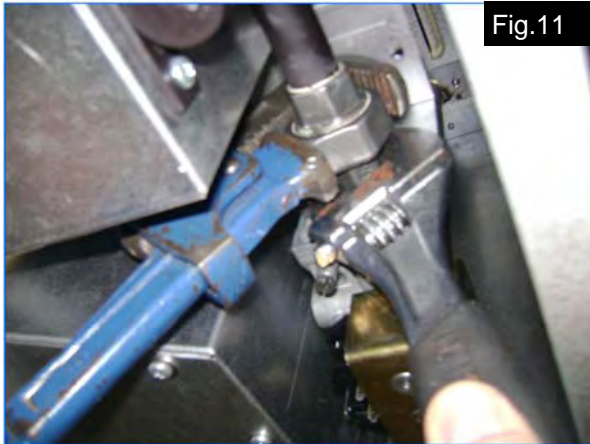


Remove the two mounting bracket screws as shown in Fig.12.

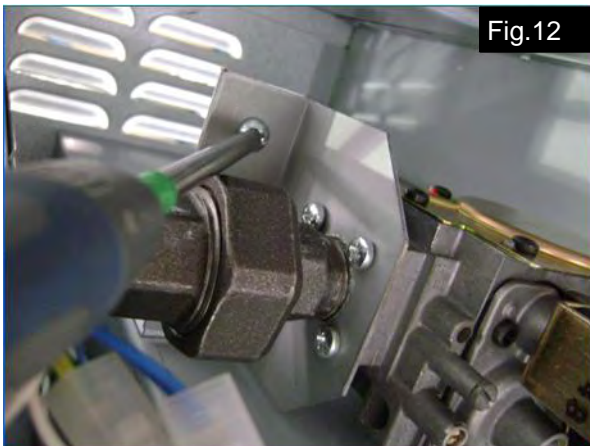


The valve can now be withdrawn from the air curtain, and the mounting bracket removed if necessary

### 8.1.2 Gas manifold/injectors.

Follow previous steps describing removal of valve to manifold pipe union. Remove the four manifold retaining screws as shown in Fig.13.

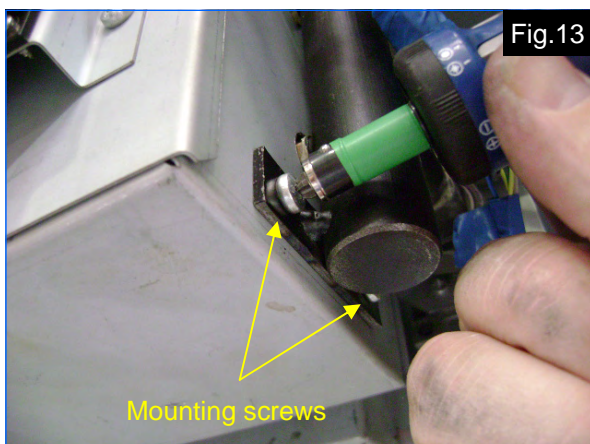


The manifold can now be removed downwards complete with injectors. Fig.14 shows the manifold with injectors in isolation for clarity.

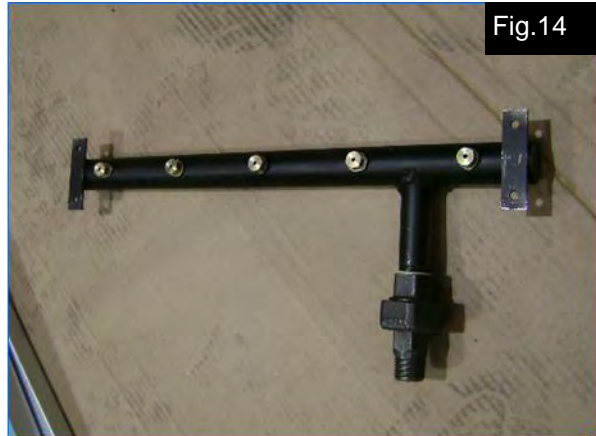


### 8.1.3 Air pressure switch.

Remove the silicon tubing from the rear connection of the air pressure switch as shown in Fig.15.

**NOTE:** only a single tube is fitted to the air pressure switch on the negative pressure side.

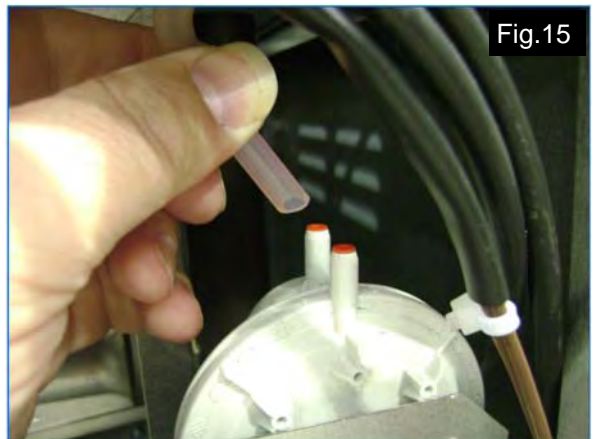

Remove the two retaining screws as shown in Fig.16.

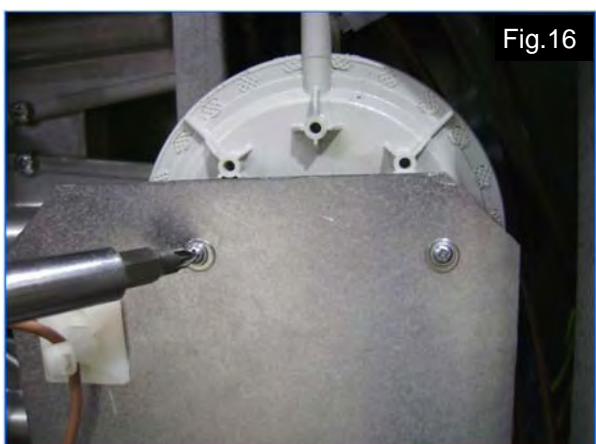



## 8. Parts Replacement cont.

Lift the air pressure switch upwards from the rear of the mounting plate then remove the three female spade connectors as shown in Fig.17 then remove switch.

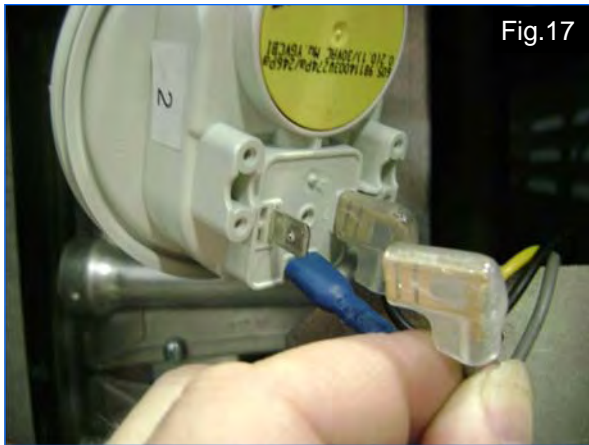


Fig.17

### 8.1.4 Ignition sequence controller.

Disconnect the multi-pin connectors from the ignition controller as shown in Fig.18.

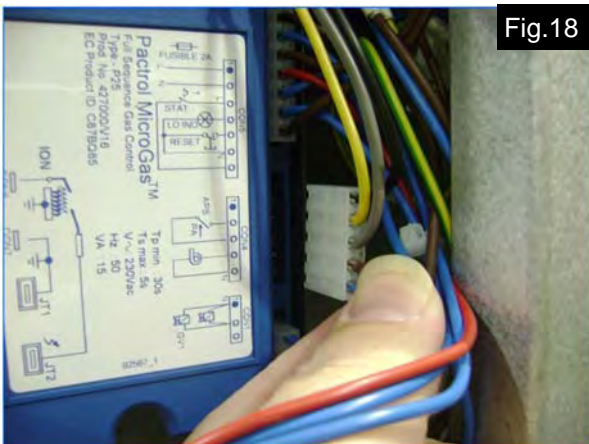


Fig.18

Remove the two fixing screws securing the ignition controller to the mounting plate as shown in Fig. 19. then remove controller.

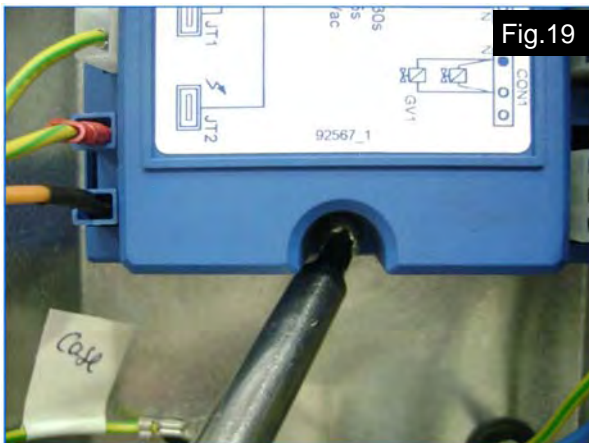


Fig.19

### 8.1.5 I/D fan.

The I/D fan is mounted on top of the unit towards the right hand side.

First remove the flue and the fan/flue adapter from the fan outlet.

Disconnect the mains plug/socket feeding the fan.

Remove the four 6mm screws (arrowed Fig. 20) securing the fan to the air curtain flue outlet.

Securing screws

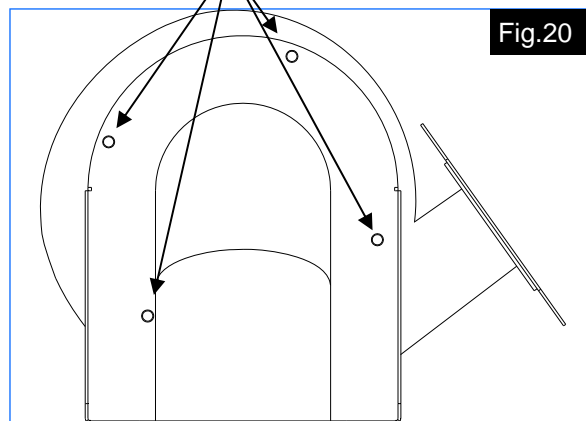



Fig.20

Remove the fan taking care not to damage the gasket seal.

## 8. Parts Replacement cont.

### 8.1.6 Flame probe.

Remove the flame probe cable spade connector as shown in Fig.21.

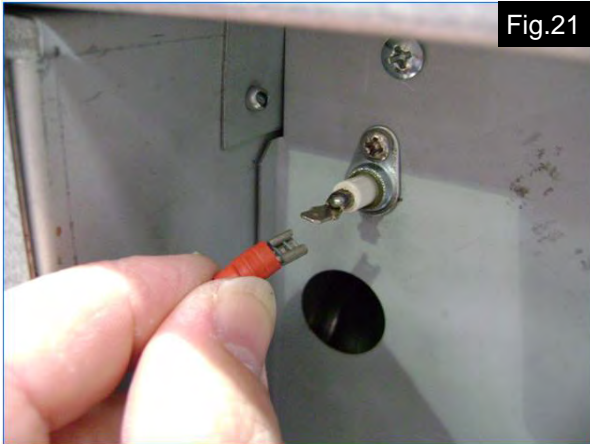

Remove flame probe fixing screw as shown in Fig.22.




Withdraw flame probe as shown in Fig.23.



### 8.1.7 Spark electrode


Remove the HT cable spade connector from the ignition sequence controller as shown in Fig.24.

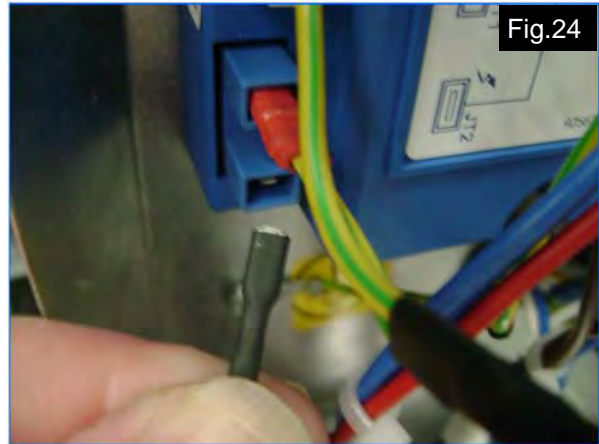

Remove fixing screw as shown in Fig.25.



Withdraw spark electrode complete with HT cable as shown in Fig.26.

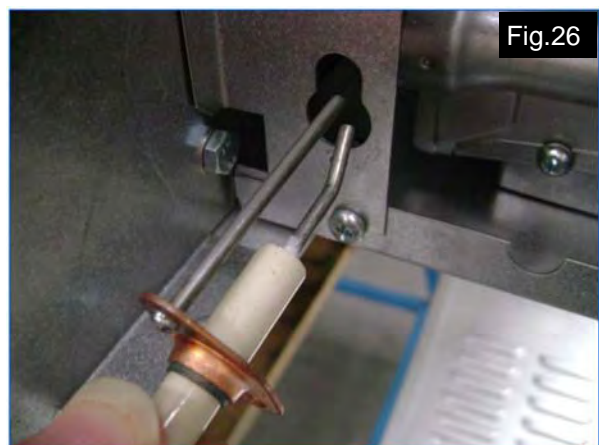




## 8. Parts Replacement cont.

### 8.1.8 Overheat thermostats


Remove the two retaining screws securing the thermostat access lid as shown in Fig.27.

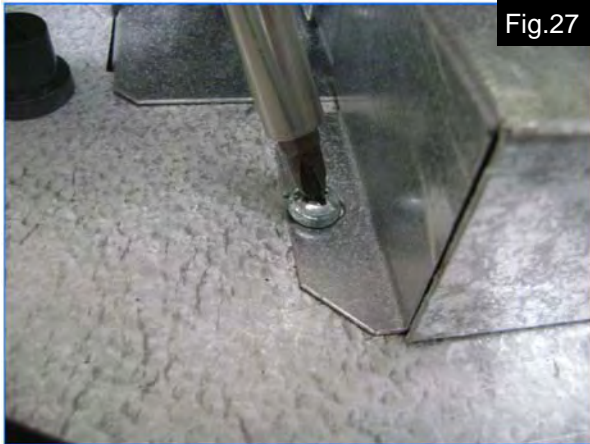

Remove the spade terminals from the manual reset thermostat as shown in Fig. 30.



Disconnect the spade terminals from the self resetting thermostat as shown in Fig.28.

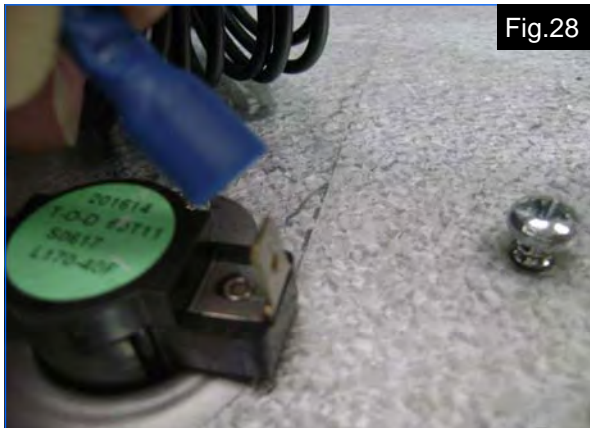


Remove the single retaining screw securing the manual reset thermostat as shown in Fig.31.



Remove the two retaining screws as shown as shown in Fig.29. and remove.




Remove from location slot complete with bracket as shown in Fig.32.

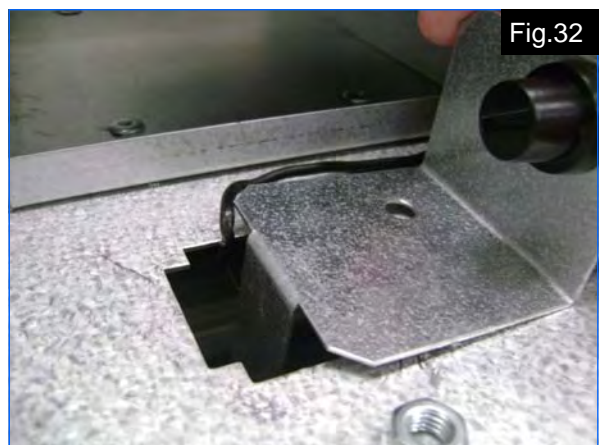

## 8. Parts Replacement cont.

### 8.2 Air distribution fans.

The air distribution fans can be accessed by removing the retaining screws securing the hinged lid on the underside of the air curtain. (See Fig.33)


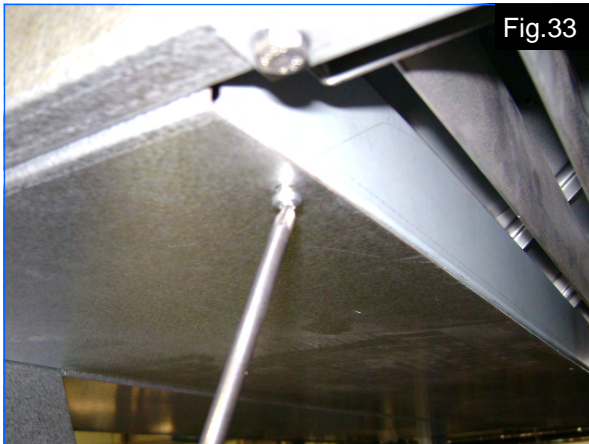


The lid can now be hinged down to access the fans as shown in Fig.34.




#### 8.2.1 Fan closure plate

Before individual fans can be removed it will be necessary to remove the fan closure plate. Remove the retaining screws around the perimeter of the plate. (See Figs.35/36) The plate can now be removed.

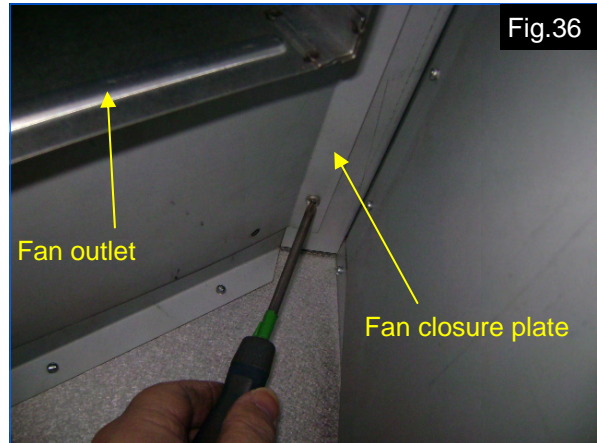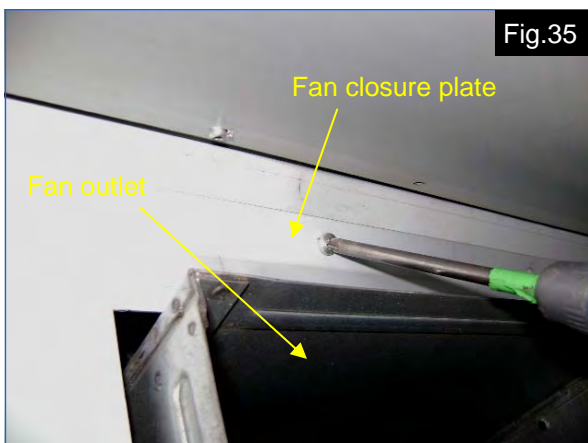

#### 8.2.2 Fan removal

Identify the feed cable for the fan requiring removal and disconnect it from its cable mounted plug/socket. (See Fig.37)

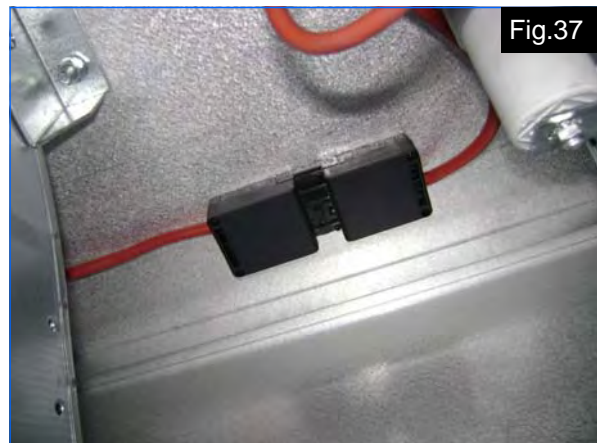

The four bolts securing the fan can now be removed as shown in Fig.38, and the fan removed from the air curtain downwards.



! **CAUTION:** these fan units are heavy.



# 8. Parts Replacement cont.

Fig.39 shows single air distribution fan in isolation for clarity.

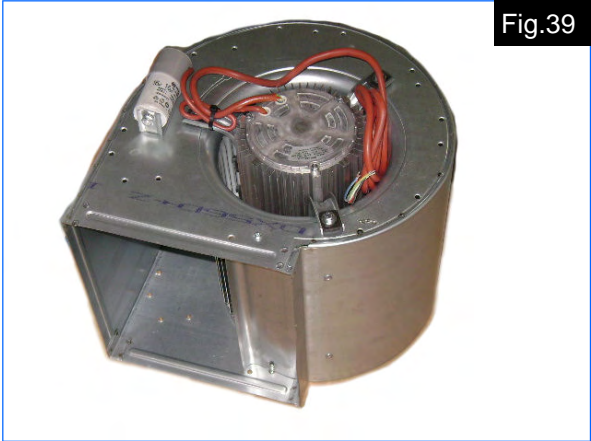


Fig.39



## 9. Spare Parts.


### Recommended spares

In order to aid troubleshooting and servicing we recommend that the components shown in this section should be stocked.

**! Note: Any spare parts or components used that are not approved by AmbiRad could invalidate the approval of the appliance and also the warranty.**


Item	Description	Part No.	Item	Description	Part No.
	Ignition controller	106963		3 speed air distribution fan unit	AB-FAN
	Gas valve twin sol 220/240V ac	2055		Injectors (5 off)	Natural gas: AB 175N/AB 225N 106962/106810 Propane: AB 175P/AB 225P 106958/106957
	Pressure switch	201932		Manifold	103201
	Combustion (I/D) fan	202267		Burner	106715
	Illuminated reset rocker switch	2645		Red neon	2180
	Self resetting limit control	SCLC1		Amber neon	2175
	Flame probe	106798		Manual reset limit control c/w capillary	STLC3
	Flame probe lead	900387		Ignition electrode c/w HT lead	106797

# 10. Fault Finding.

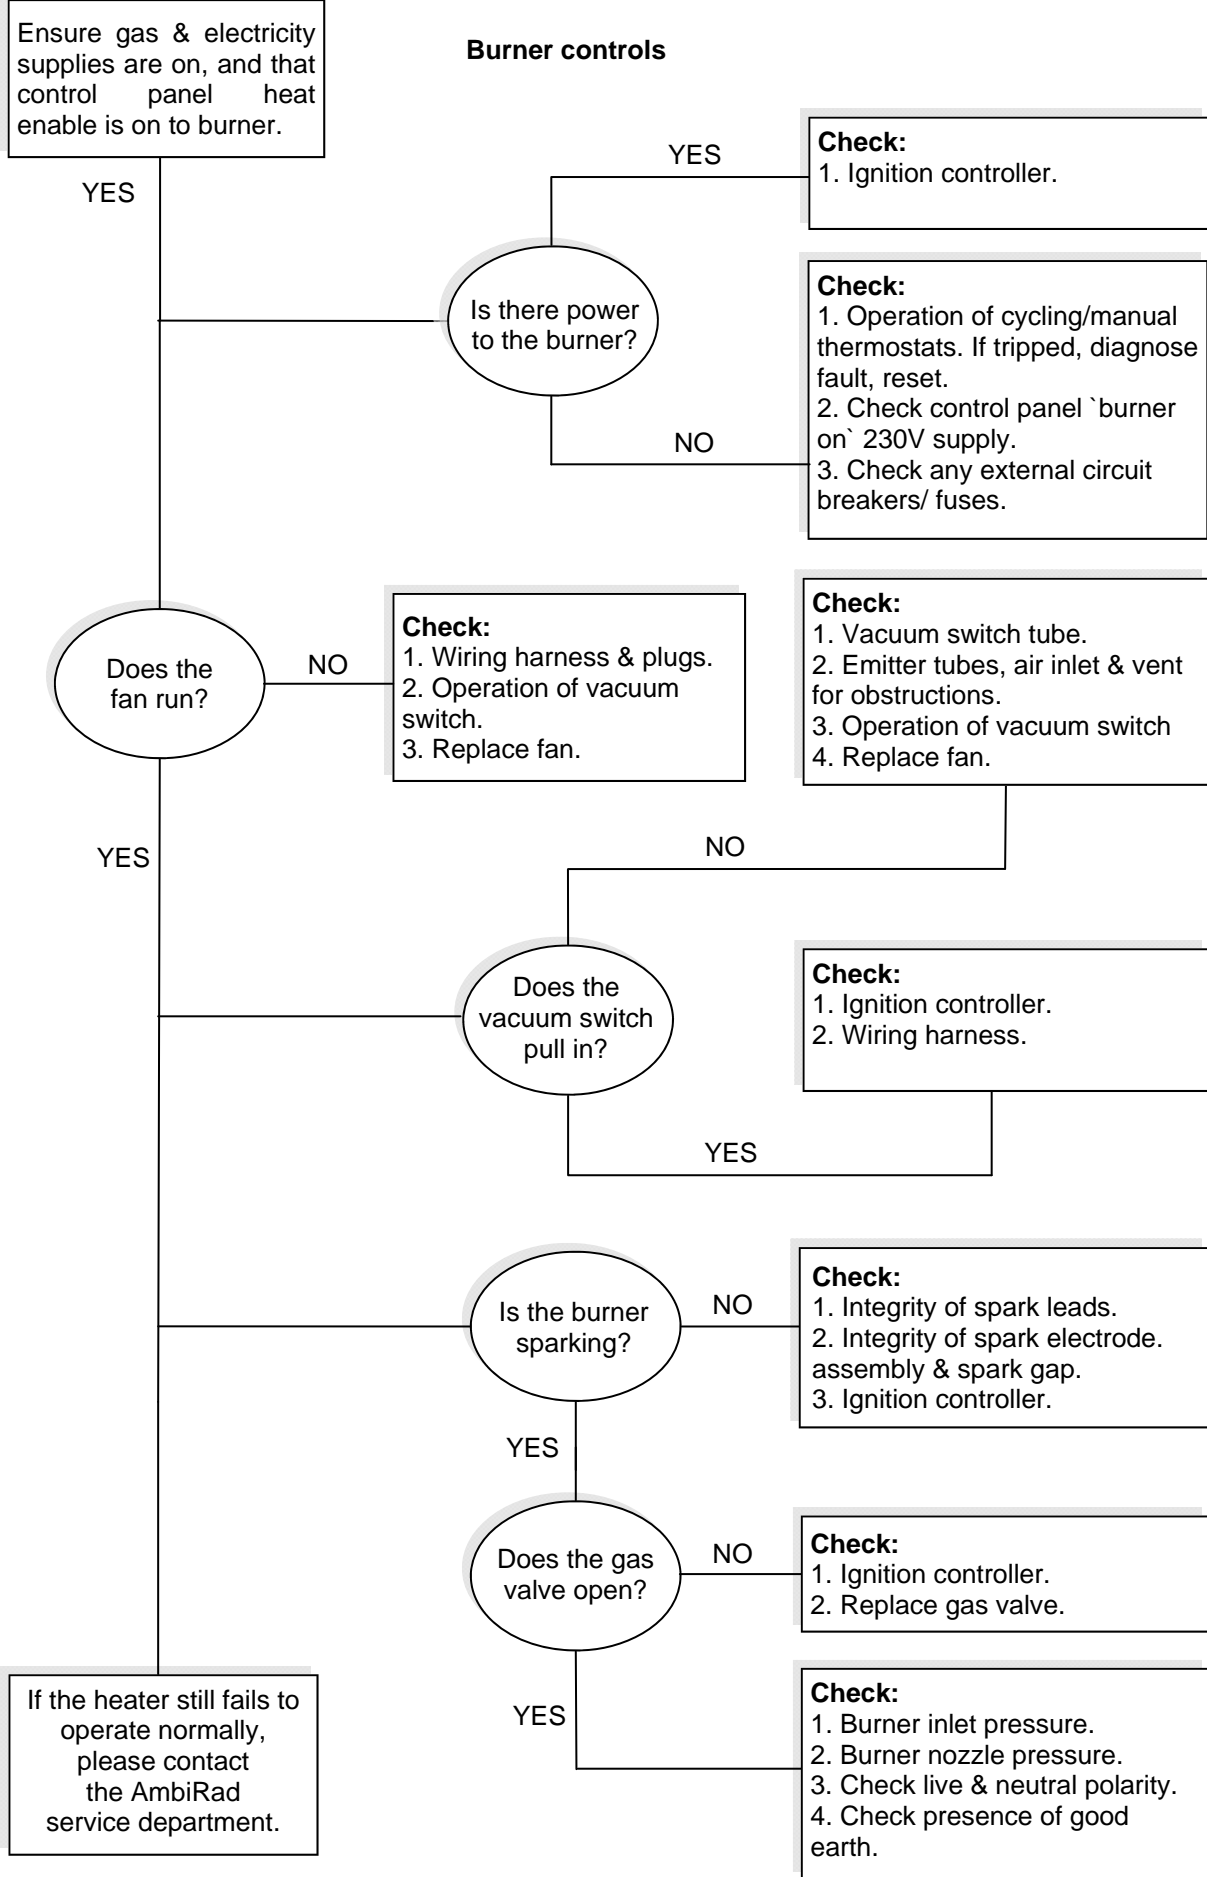

## 10. Fault Finding cont.

### Air distribution fans

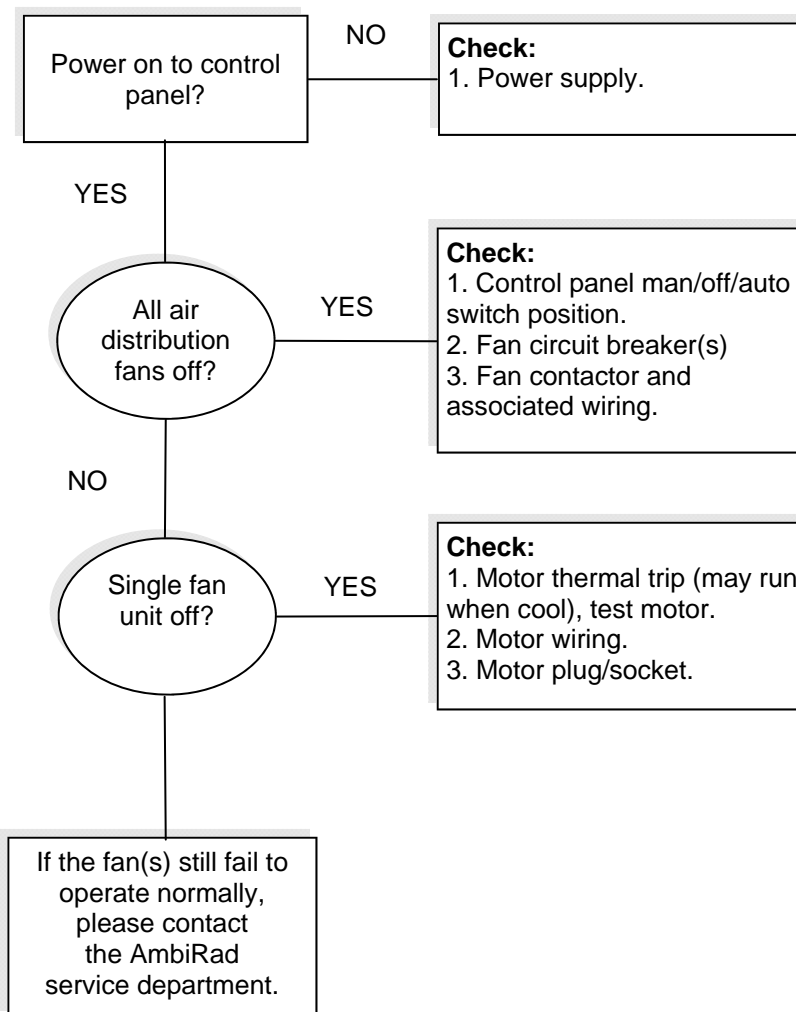

Notes.

## Notes.

# 11. User Instructions.

## 11.1 Important information

This appliance must only be installed by a competent person in accordance with the requirements of the codes of practice and the rules in force in the country of use.

**11.1.1** The appliance **must** be earthed.

**11.1.2** Never rest anything, especially ladders, against the air curtain.

## 11.2 To start the AB air curtain

**11.2.1** First ensure that the gas supply to the air curtain is turned on.

**11.2.2** Ensure that the control panel auto/off/manual selector switch is in the manual position, and that the heat/cool selector switch is in the heat position.

**11.2.3** Switch on electrical supply to the control panel. The panel live lamp, and the red burner live neon lamp on the air curtain will illuminate, the combustion fan and the air distribution fans will start, and the automatic ignition sequence will commence.

**11.2.4** After completion of an air purge period, ignition of the burner will occur, and the amber burner on lamp will illuminate.

**11.2.5** If lockout should occur, the red rocker switch on the burner panel, and the lockout lamp on the control panel will illuminate. The lockout

can be reset by pressing the illuminated rocker switch on the burner panel, or the control panel lockout reset button, providing the lockout condition has cleared. If lockout re-occurs, switch off air curtain and call out a service engineer.

## 11.3 To switch off the AB air curtain

**11.3.1** Rotate the auto/off/manual control panel switch to the 'off' position. The burner will shut off, and the combustion fan and air distribution fans will stop.

**11.3.2** If the air curtain is switched off for periods in excess of one week, it is highly recommended that both gas and electrical supplies to the air curtain are turned off.

## 11.4 Servicing

To ensure continued efficient and safe operation it is recommended that the air curtain is serviced regularly by a competent person, once a year in normal working conditions, but in exceptionally dusty or polluted conditions more frequent servicing may be required.

*The manufacturer, (AmbiRad, address given below), offers a maintenance service, details of which are available on request.*

*For sales related queries please contact the Nordair Niche address given below.*



### WARNING:

THIS AIR CURTAIN SHOULD NOT BE INSTALLED WHERE THERE IS A CORROSIVE ATMOSPHERE.



NORTEK GLOBAL HVAC (UK) LTD  
Fens Pool Avenue  
Brierley Hill  
West Midlands DY5 1QA  
United Kingdom

Tel: 01384 489 250  
Fax: 01384 489 707

airbloccsales@nortek.com  
www.ambirad.uk

Document reference number GB/AIR/035/0716  
Replaces GB/AIR/035/1214